








# Thule Rapid System Kit 1790

# > Instructions

**VOLKSWAGEN Passat CC**, 4-dr Coupé, 08-11 / \*09-11

**VOLKSWAGEN CC**, 4-dr Coupé, 12-

\*North America

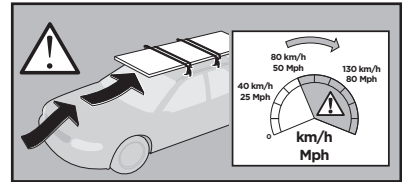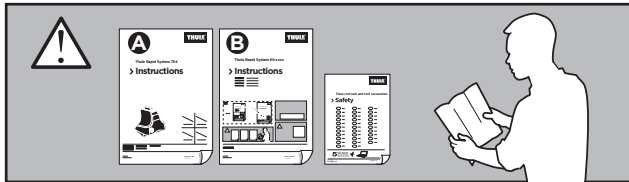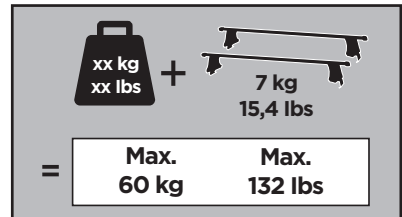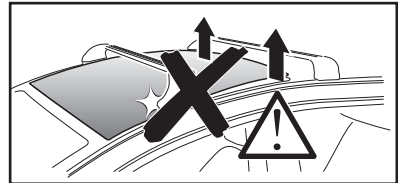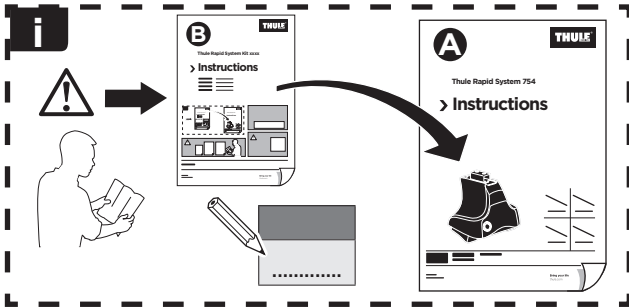


ISO 11154-E

141790

C.20150615  
519-1790-01

Bring your life  
thule.com




- ◀ 1331 x1
- ◀ 1332 x1
- ◀ 1333 x1
- ◀ 1334 x1

93 x2 ▶

302 x1 ▶


303 x1 ▶



52576



x2



50993

x2






x1



x1

# 1

	X (scale)	X (mm)	X (inch)
<b>VOLKSWAGEN Passat CC</b> , 4-dr Coupé, 08-11 / *09-11	42	1071	42 <sup>1</sup> / <sub>8</sub>
<b>VOLKSWAGEN CC</b> , 4-dr Coupé, 12-	42	1071	42 <sup>1</sup> / <sub>8</sub>

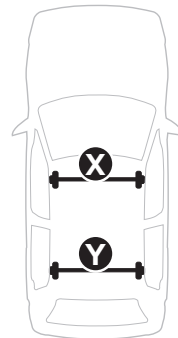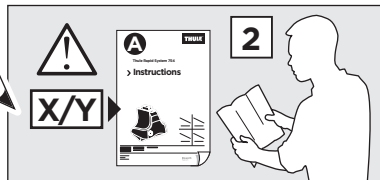
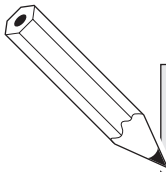


	Y (scale)	Y (mm)	Y (inch)
<b>VOLKSWAGEN Passat CC</b> , 4-dr Coupé, 08-11 / *09-11	40	1051	41 <sup>3</sup> / <sub>8</sub>
<b>VOLKSWAGEN CC</b> , 4-dr Coupé, 12-	40	1051	41 <sup>3</sup> / <sub>8</sub>


**2**

**VOLKSWAGEN Passat CC**, 4-dr Coupé, 08-11 / \*09-11



**VOLKSWAGEN CC**, 4-dr Coupé, 12-

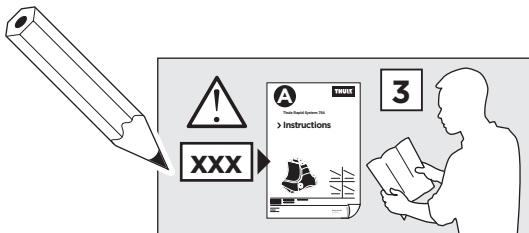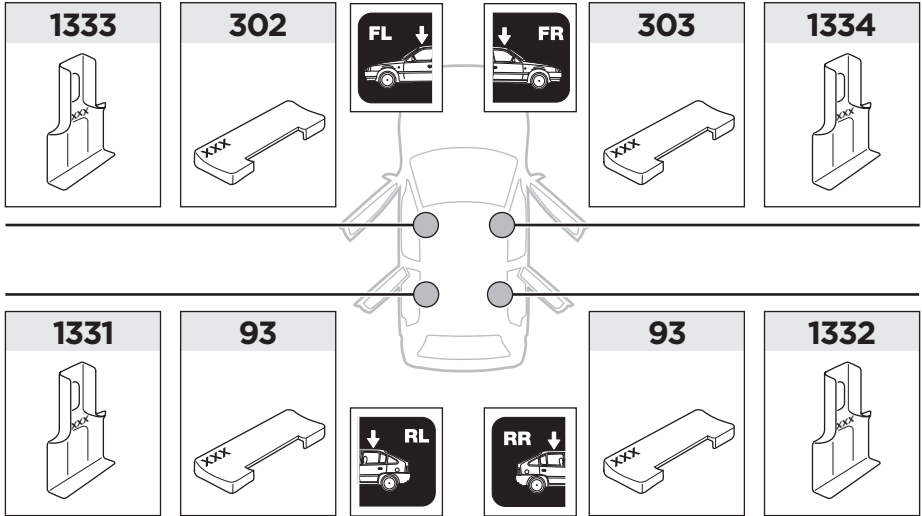


**3**

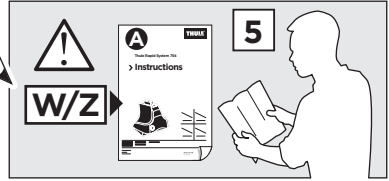




	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>VOLKSWAGEN Passat CC</b> , 4-dr Coupé, 08-11 / *09-11	<b>155</b>	<b>735</b>	<b>6 1/8</b>	<b>28 7/8</b>
<b>VOLKSWAGEN CC</b> , 4-dr Coupé, 12-	<b>155</b>	<b>735</b>	<b>6 1/8</b>	<b>28 7/8</b>

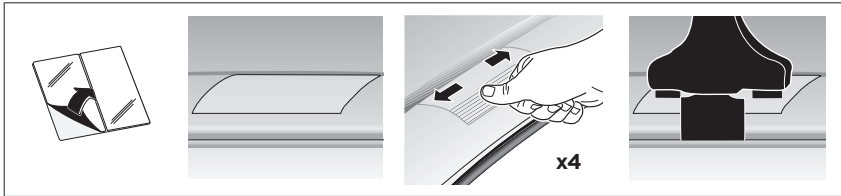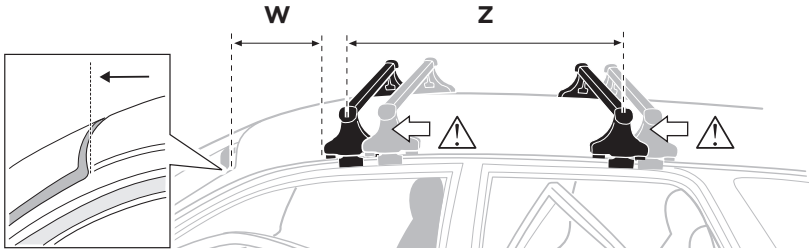

**x2**

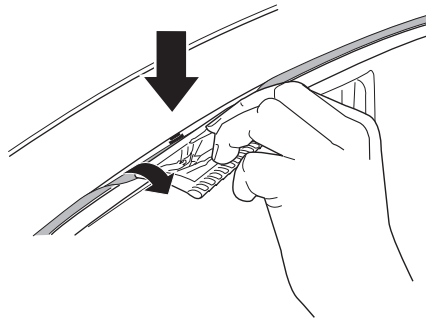

4

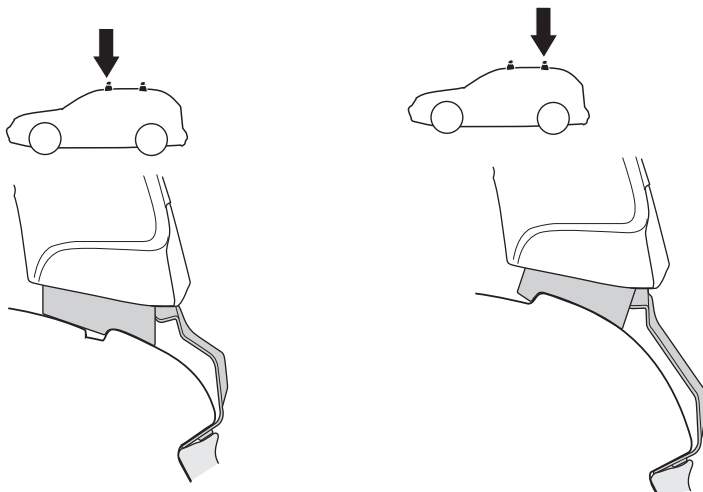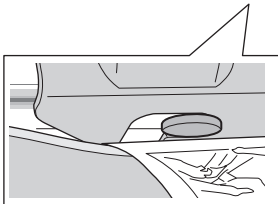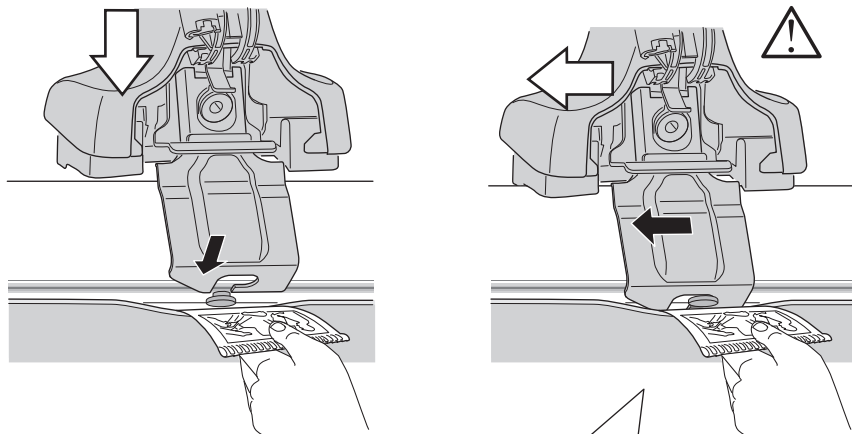







Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN  
Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA



[info@thule.com](mailto:info@thule.com)  
Phone: 800-238-2388



[www.thule.com](http://www.thule.com)