
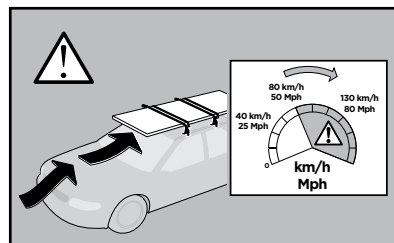
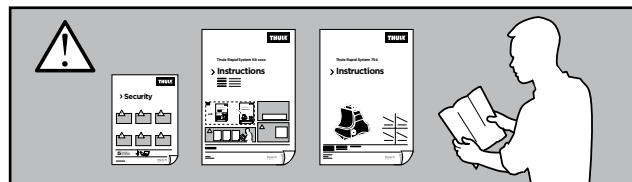
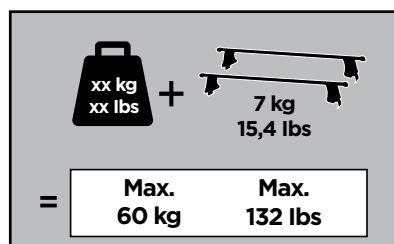


Thule Rapid System Kit 1130

> Instructions

FIAT Multipla, 5-dr MPV, 99-01, 02-04, 05–


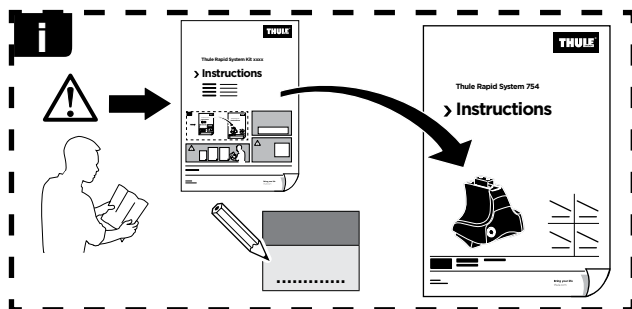


ISO 11154-E


141130

C.20121018
519-1130-01

Bring your life
thule.com

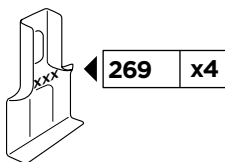




x1



x1

1



	X (scale)	X (mm)	X (inch)
FIAT Multipla, 5-dr MPV, 99-01, 02-04, 05-	65	1301	51 ¹ / ₄

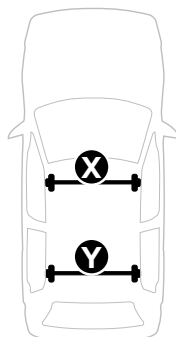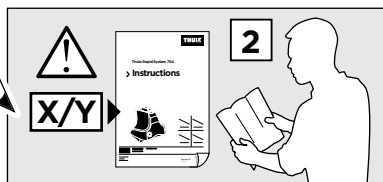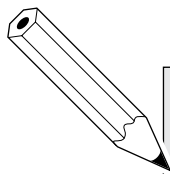



	Y (scale)	Y (mm)	Y (inch)
FIAT Multipla, 5-dr MPV, 99-01, 02-04, 05-	61	1261	49 ⁵ / ₈

2

FIAT Multipla, 5-dr MPV, 99-01, 02-04, 05-

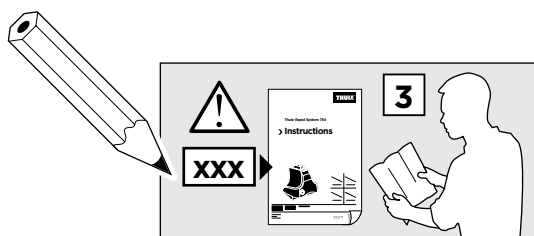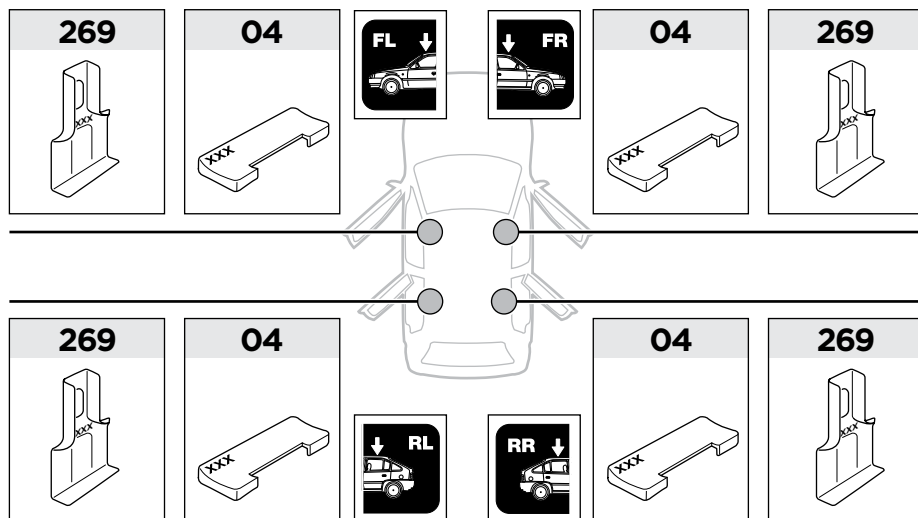

3

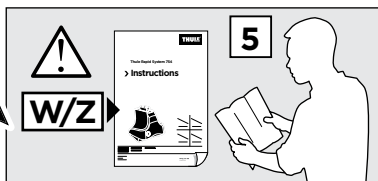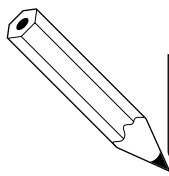

	W (mm)	Z (mm)	W (inch)	Z (inch)
FIAT Multipla , 5-dr MPV, 99-01, 02-04, 05-	400	700	15 ³/₄	27 ¹/₂

