
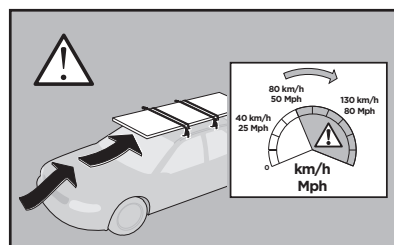
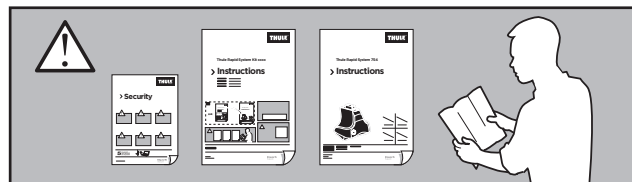
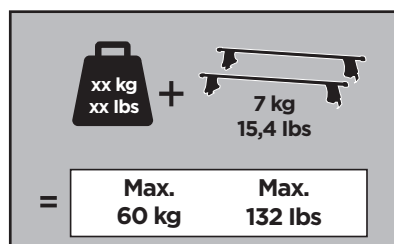


Thule Rapid System Kit 1311

> Instructions

RENAULT Laguna II, 5-dr Hatchback, 02-04, 05-07

RENAULT Laguna II, 5-dr Estate, 02-04, 05-07

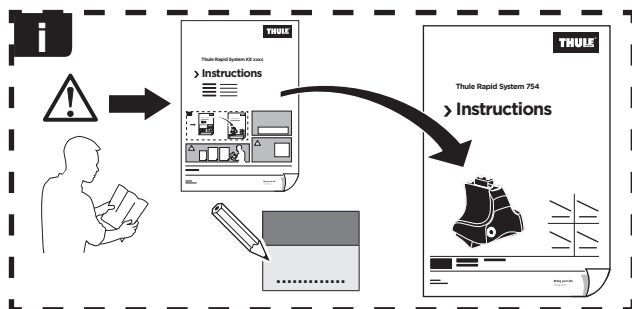

ISO 11154-E


141311

C.20121122
519-1311-02

Bring your life
thule.com




02 x4



575 x4






x1



x1

1

	X (scale)	X (mm)	X (inch)
RENAULT Laguna II, 5-dr Hatchback, 02-04, 05-07	27,5	926	36 1/2
RENAULT Laguna II, 5-dr Estate, 02-04, 05-07	27,5	926	36 1/2

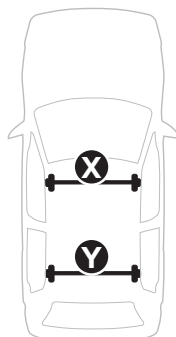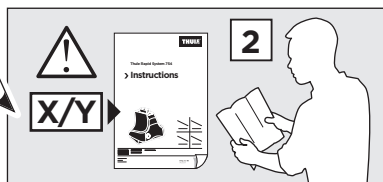
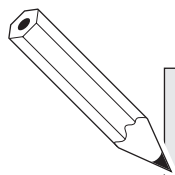


	Y (scale)	Y (mm)	Y (inch)
RENAULT Laguna II, 5-dr Hatchback, 02-04, 05-07	25,5	906	35 5/8
RENAULT Laguna II, 5-dr Estate, 02-04, 05-07	25,5	906	35 5/8



2

RENAULT Laguna II, 5-dr Hatchback, 02-04, 05-07

RENAULT Laguna II, 5-dr Estate, 02-04, 05-07

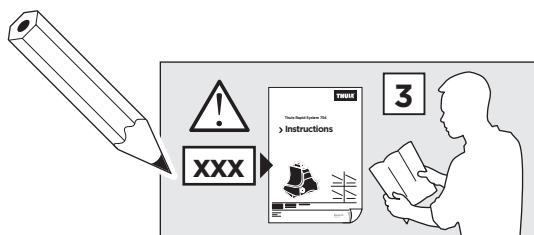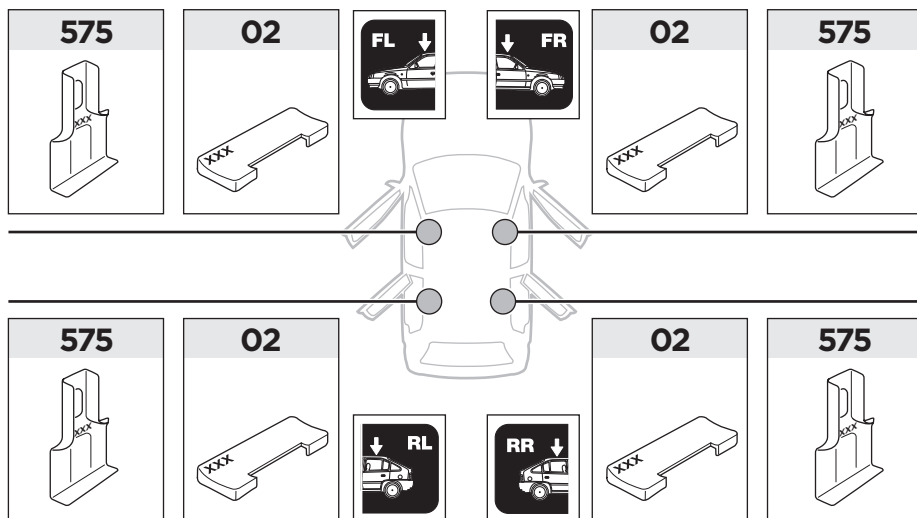

3

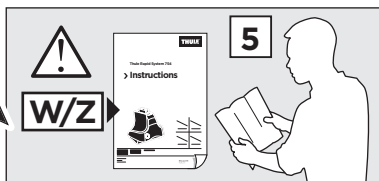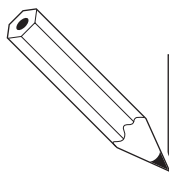

	W (mm)	Z (mm)	W (inch)	Z (inch)
RENAULT Laguna II , 5-dr Hatchback, 02-04, 05-07	240	710	9 1/2	28
RENAULT Laguna II , 5-dr Estate, 02-04, 05-07	340	825	13 3/8	32 1/2

